IN8001 ULTI Rack







This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD. IN8001 B - IW - 16/02/2016

Van Guard Accessories Ltd Fair Oak Close, Exeter Airport Business Park, Exeter, Devon, EX5 2UL www.van-guard.co.uk

IN8001 - PAGE 1 OF 8











Stick rubber pads to the underside of the roof brackets. 2 25

3.1 The following step is for venicies with a step 3.2. to a vehicle with a t-rail fitting please refer to step 3.2. The following step is for vehicles with threaded insert fixing points. If fitting

Remove roof plugs to reveal the vehicles fixing points. Secure the roof brackets to the fixing points using M6x16 hex bolts*, M6 shakeproof washers, M6 washers and rubber washers. *If the M6x16 bolts are too small use the M6x25 bolts provided instead.



IN8001 - PAGE 3 OF 8



IN8001 - PAGE 4 OF 8



IN8001 - PAGE 5 OF 8



IN8001 - PAGE 6 OF 8

13 Place the remaining roof bars into position. See page 2 for the recommended distances between the roof bars. Once in position push on the lever to secure in place.



Assemble the roller spigot, M8x20 hex bolt and M8 shakeproof washer together. Place the assembly into the roller. Slide the roller onto the spigot fitted in step 14 and drop the other end into position. Tighten using the supplied tool (ME0182).



Secure the roller spigot to the **left hand roller bracket only** using a M8x20 hex bolt and a M8 shakeproof washer. Ensure that the shakeproof is on the inside of the roller bracket and that the spigot sits flush / straight. Tighten using the supplied tool.



Push the plastic bungs into position (X4).





18 Once fitted check fixings and parts to ensure they have been fully secured and tightened. Regularly check all fixings.



NOTES:

Maximum load capacity: 150KG (Including rack weight - please refer to page 2.) (Maximum load must be in accordance with the vehicle manufacturer's load bearing capacity. Please refer to the vehicles handbook.). Regularly check all fixings.

Retain these instructions for future reference.