

Fitting Instructions - Read instructions carefully before fitting and follow them for correct use

IN8222 ULTI Rack

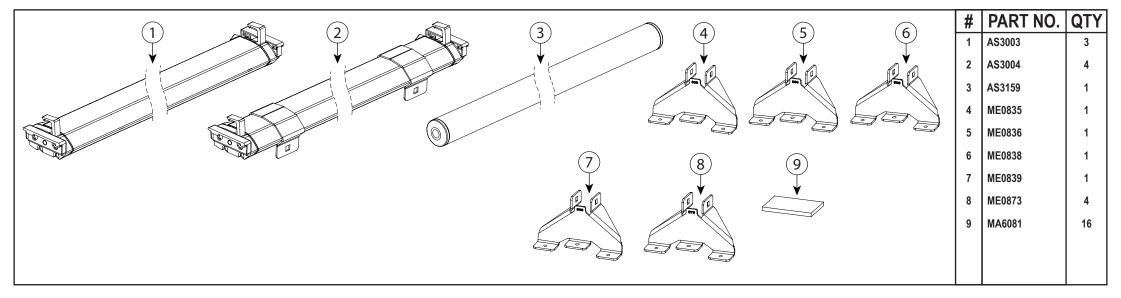

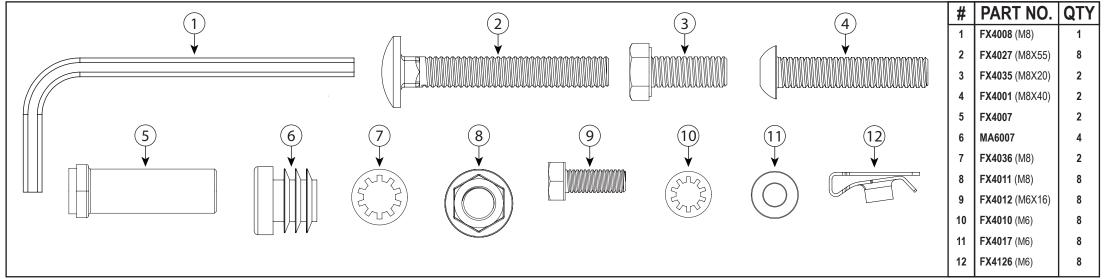






This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8222 B - IW - 24/05/2017


Van Guard Accessories Ltd Fair Oak Close, Exeter Airport Business Park, Exeter, Devon, EX5 2UL www.van-guard.co.uk


VGUR-073 350mm 350mm 350mm R Vehicle: Citroen Dispatch: 2016 on Peugeot Expert: 2016 on Toyota Pro-Ace: 2016 on Wheel Base: L3 / XL / Long Roof Height: H1 / Standard 400mm 700mm 495mm 700mm 3275mm Rear Doors: Twin 5309mm 2800mm

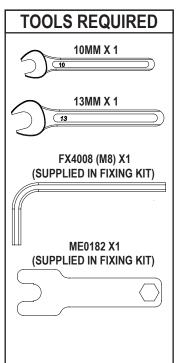


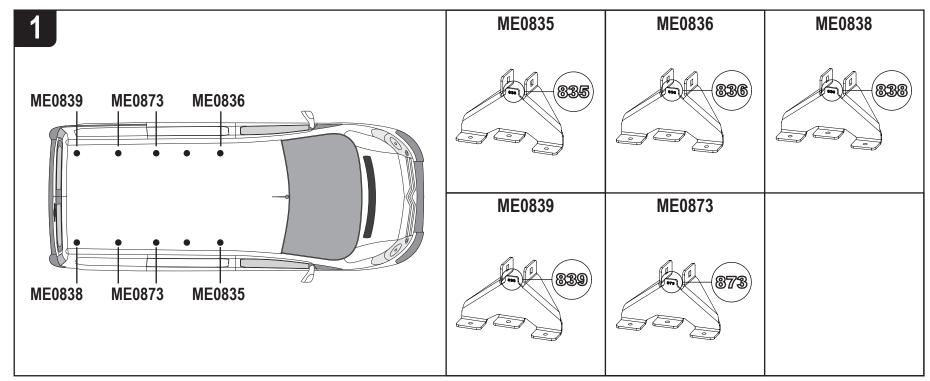


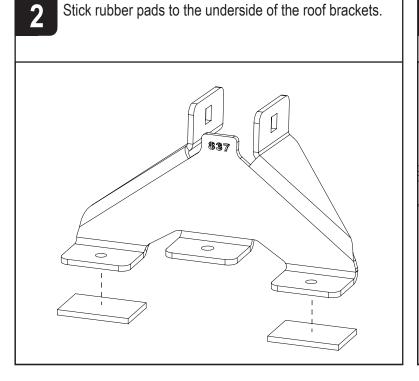


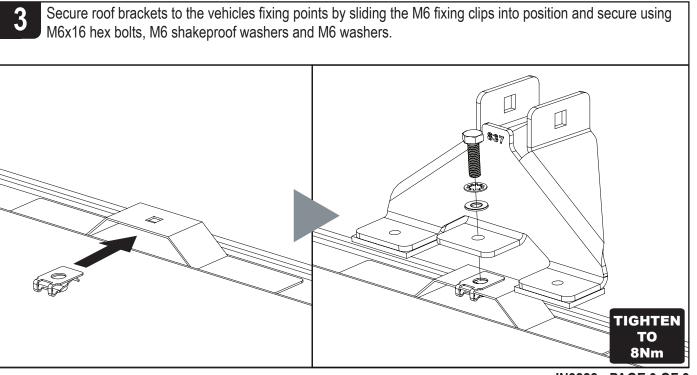

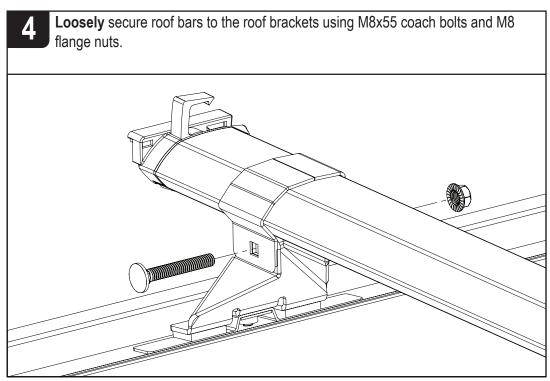


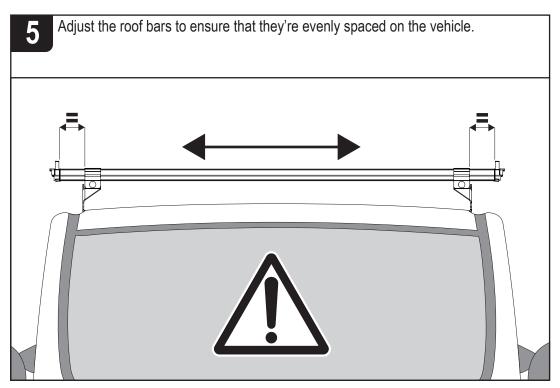


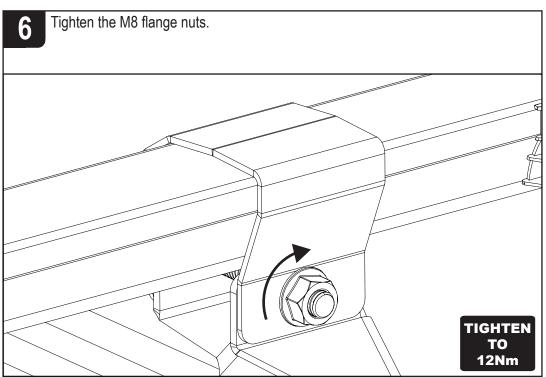


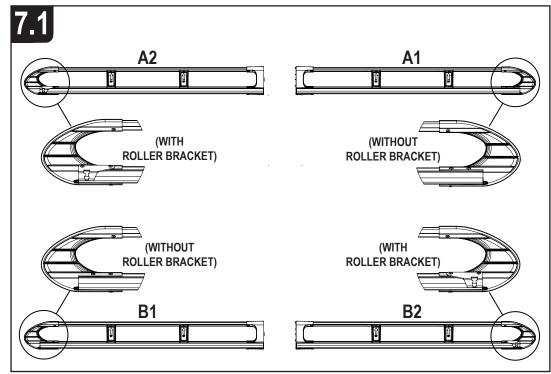



IN8222 - PAGE 4 OF 8

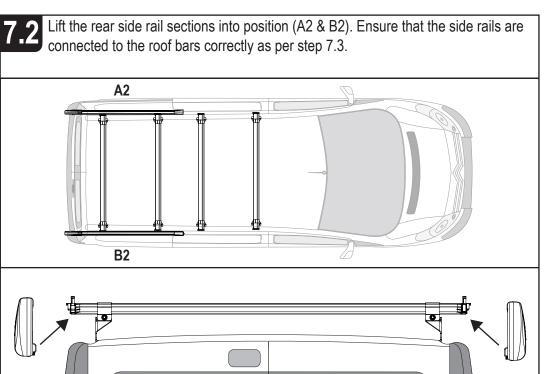


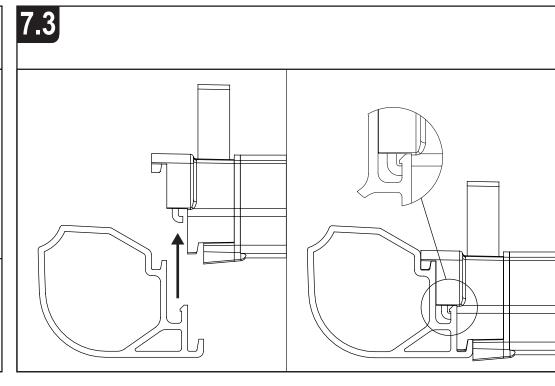

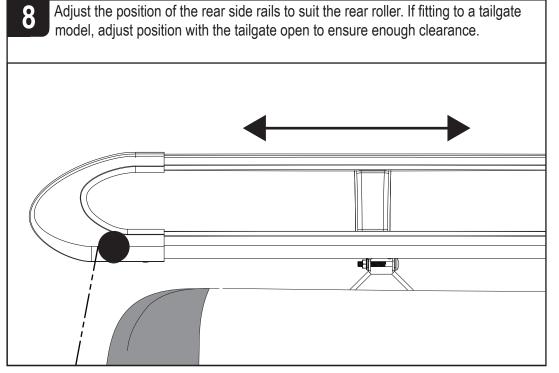


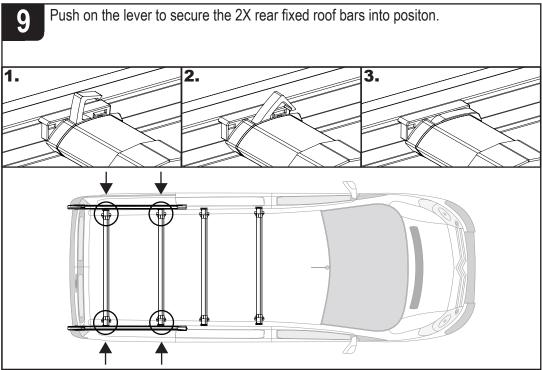


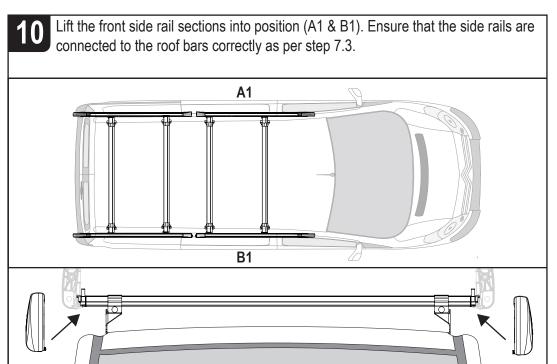

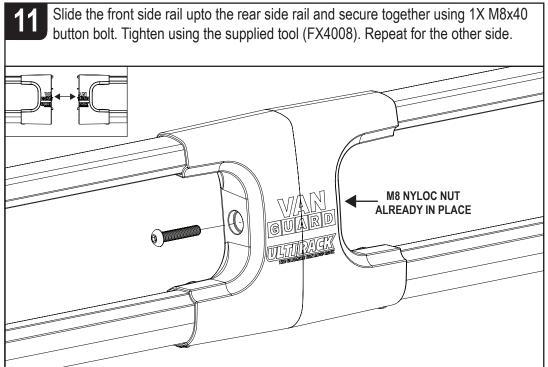


Place the remaining roof bars into position. See page 2 for the recommended

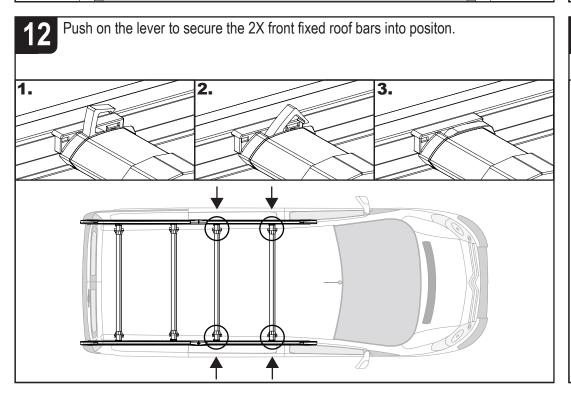


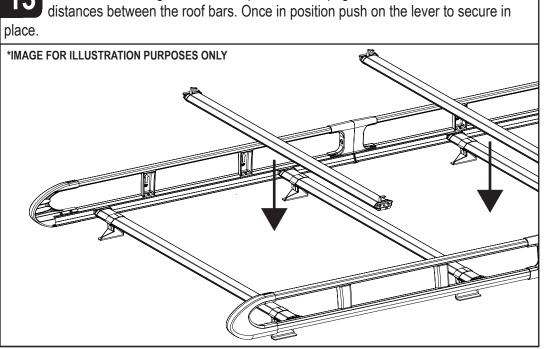



Secure the roller spigot to the **left hand roller bracket only** using a M8x20 hex bolt and a M8 shakeproof washer. Ensure that the shakeproof is on the inside of the roller bracket and that the spigot sits flush / straight. Tighten using the supplied tool.

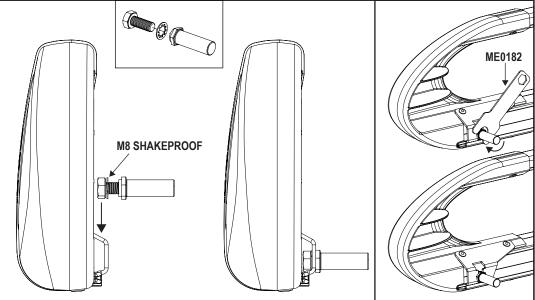

Assemble the roller spigot, M8x20 hex bolt and M8 shakeproof washer together. Place the assembly into the roller. Slide the roller onto the spigot fitted in step 14 and drop the other end into position. Tighten using the supplied tool.

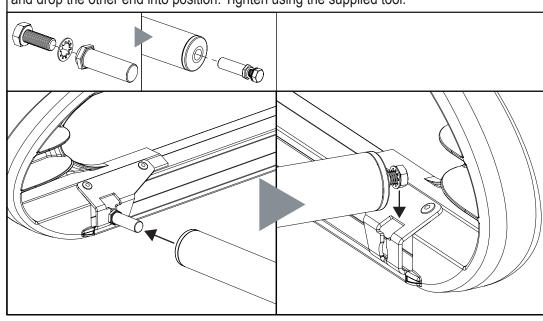

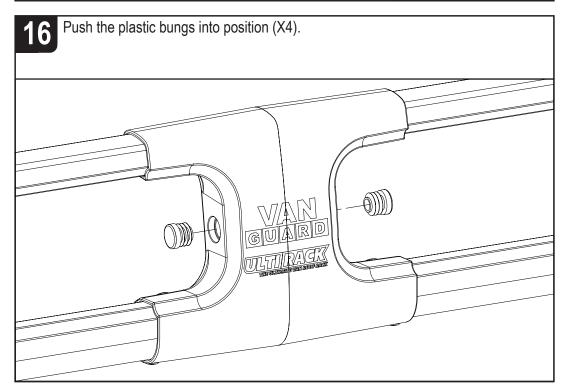

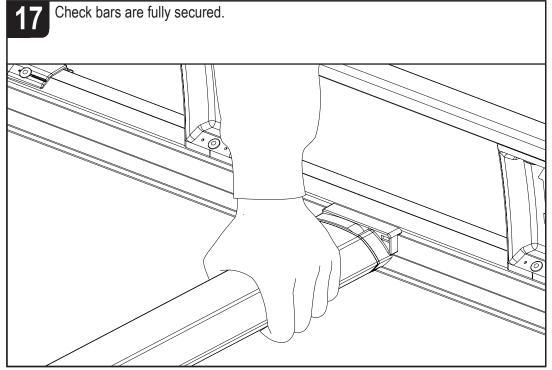

IN8222 - PAGE 7 OF 8

Once fitted check fixings and parts to ensure they have been fully secured and tightened. Regularly check all fixings.



NOTES:

Maximum load capacity: 150KG (Including rack weight - please refer to page 2.) (Maximum load must be in accordance with the vehicle manufacturer's load bearing capacity. Please refer to the vehicles handbook.). Regularly check all fixings.

Retain these instructions for future reference.