

Side bar / Ford E-Transit 22- L3

Item no: AS3113XX-E

Contents - QMK0008

#	No	Item no	Description
A	1x	23032012	Mounting bracket left
B	1x	23032013	Mounting bracket right
C	4x	23031008	Mounting bracket side bar
D	12x	7985T0600304	Nut Torx A2 M6x30
E	12x	7570600000	Bolt M6x18,5
F	12x	125A064	Washer M6
G	4x	985V104	Nut M10
H	4x	933100304	Bolt M10x30
I	4x	125A104	Washer A2 M10



Contents - QAS2600

#	No	Item no	Description
1	2x	SMV3107	Sidebar
2	2x	23011001	Plastic cap right
3	2x	23011002	Plastic cap left
4	12x	086568 25	Bolt M8x25
5	12x	985V084	Nut M8
6	12x	125A084	Washer M8
7	6x	ULS804	Reflex, yellow (sideways pointing)




Side bar / Ford E-Transit 22- L3

Item no: AS3113XX-E


Front ← → Rear




1

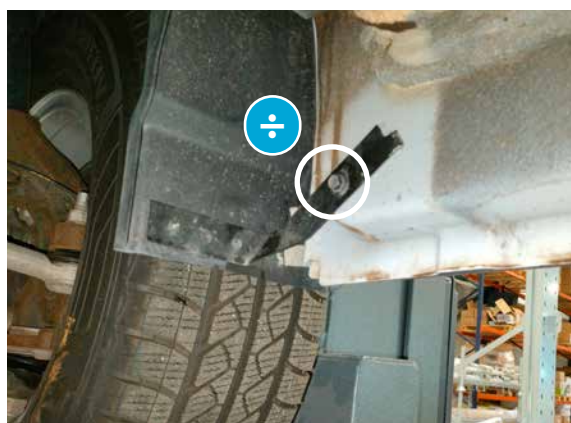

2

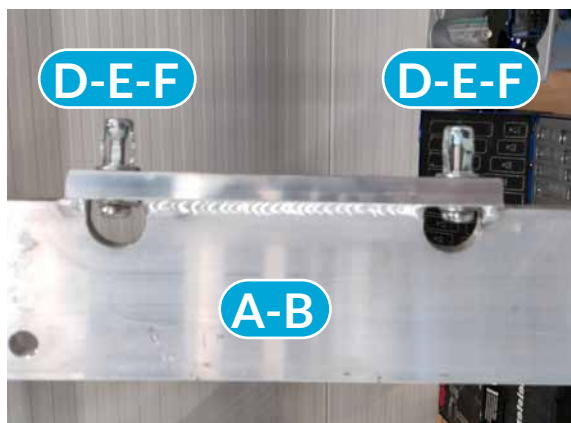

3

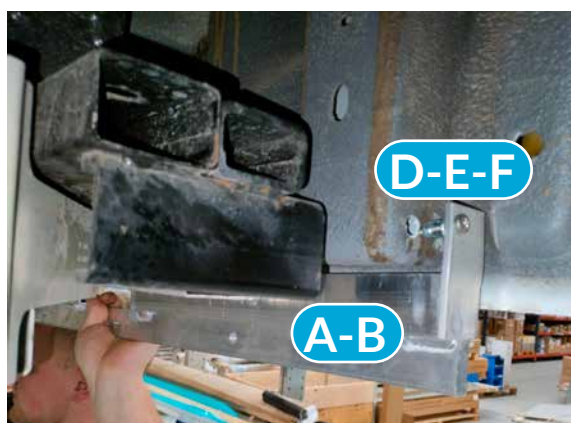

4




Side bar / Ford E-Transit 22- L3

Item no: AS3113XX-E




5

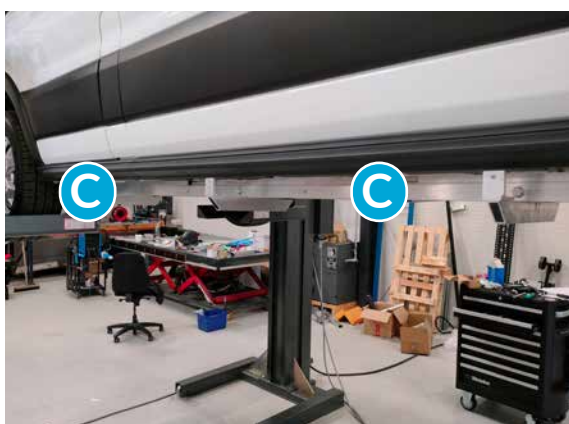

Place brackets C at position 2 and 8 seen from front

6

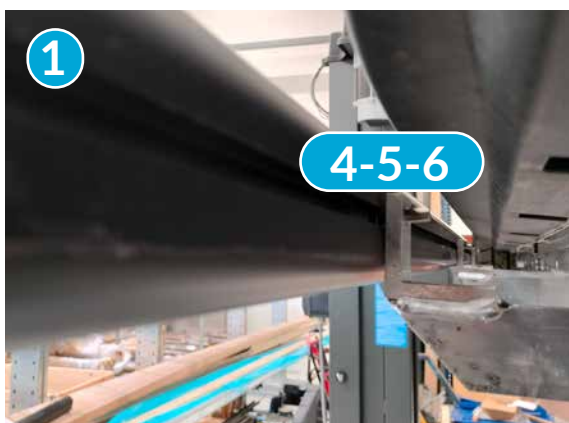

7



8