


Rear step / Ford E-Transit 22- Transit 14-

Item no: AT311XXX-B

Contents - QMK0001

#	No	Item no	Description
A	2x	23032014	Mounting bracket
B	1x	23032015	Mounting bracket Right
C	2x	23020003	Threaded plate
D	4x	933100704	Bolt M10x70
E	1x	985V104	Nut M10
F	5x	125A104	Washer M10
G	1x	933100304	Bolt M10x30

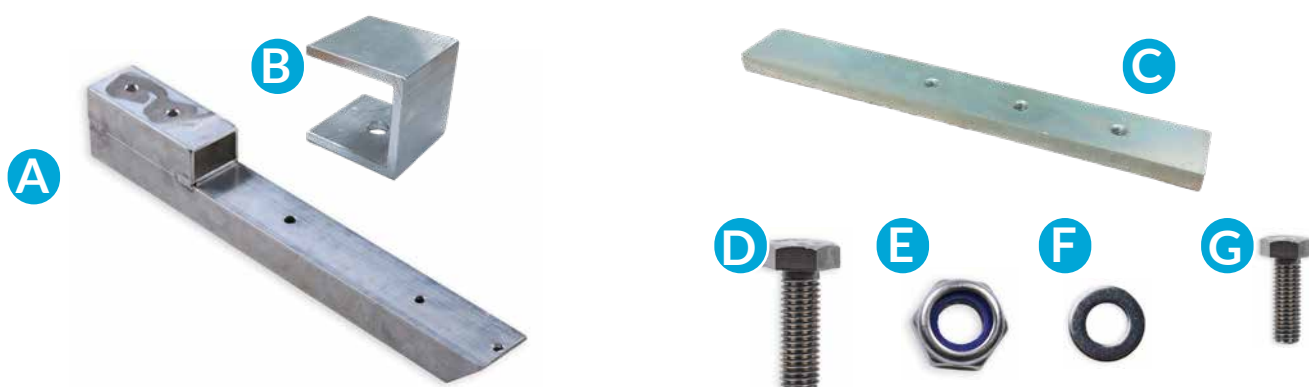

Contents - QAT1200

#	No	Item no	Description
1	1x	SMV3109	Step
2	1x	23012001	Plastic cap right side
3	1x	23012002	Plastic cap left side
4	4x	933080204	Bolt M8x20
5	4x	985V084	Nut M8
6	4x	125A084	Washer M8
7	2x	7504NT0350092	Self-tapping screw
8	1x	ULS812	Reflex, white (forward pointing)
9	2x	ULS804	Reflex, yellow (sideways pointing)
10	2x	ULS805	Reflex, red (rear pointing)





Rear step / Ford E-Transit 22- Transit 14-

Item no: AT311XXX-B





1

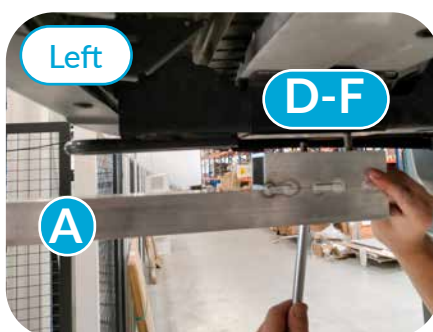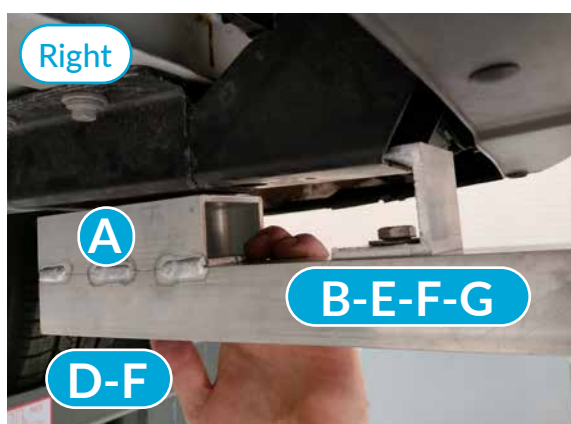

2



3

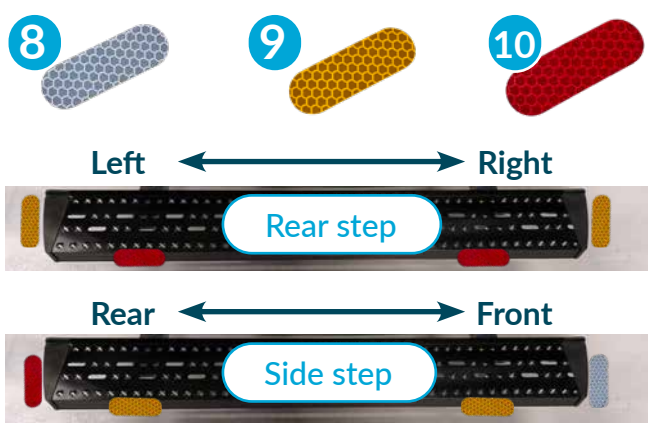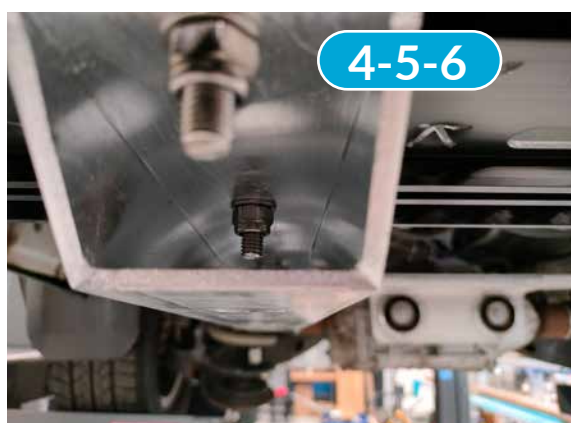

4