


Side step - Right / Ford Transit Custom 24-

Item no: AT348XXH-S

Contents - QMK0012

#	No	Item no	Description
A	1x	23032005	Mounting bracket right
B	2x	23032009	Mounting bracket Sliding Door
C	5x	23020004	L Bolt M8x30
D	5x	985V084	Nut M8
E	5x	125A084	Washer M8
F	4x	933100304	Bolt M10x30
G	4x	985V104	Nut M10
H	8x	125A104	Washer M10

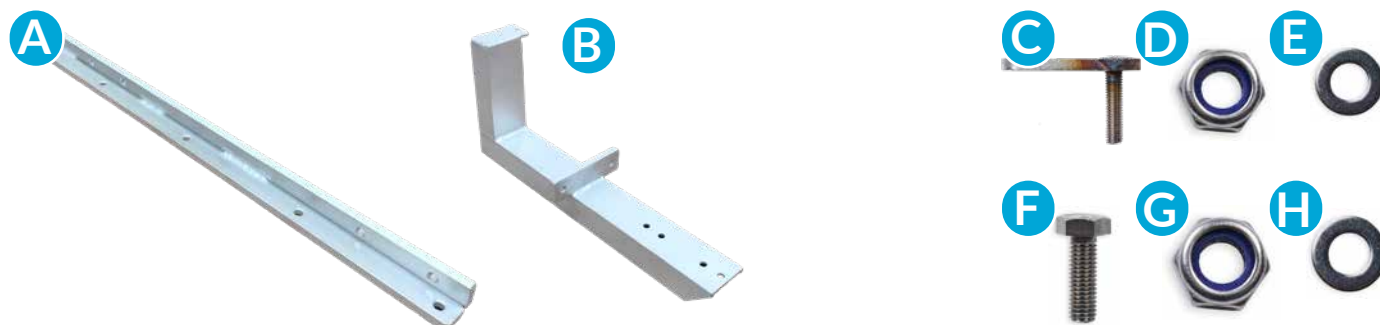

Contents - QAT1200

#	No	Item no	Description
1	1x	SMV3109	Step
2	1x	23012001	Plastic cap right side
3	1x	23012002	Plastic cap left side
4	4x	933080204	Bolt M8x20
5	4x	985V084	Nut M8
6	4x	125A084	Washer M8
7	2x	7504NT0350092	Self-tapping screw
8	1x	ULS812	Reflex, white (forward pointing)
9	2x	ULS804	Reflex, yellow (sideways pointing)
10	2x	ULS805	Reflex, red (rear pointing)




Side step - Right / Ford Transit Custom 24-

Item no: AT348XXH-S

Front ← → Rear




1

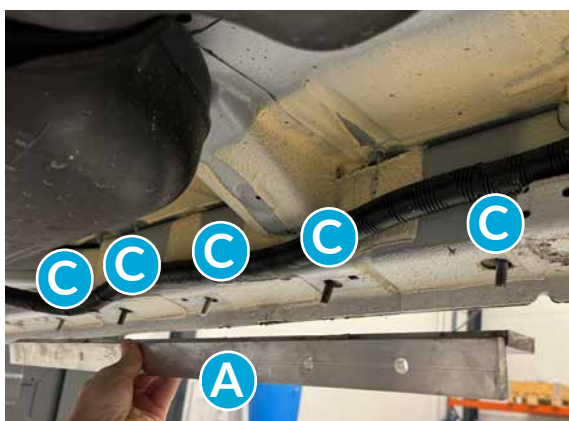

C-D-E



2

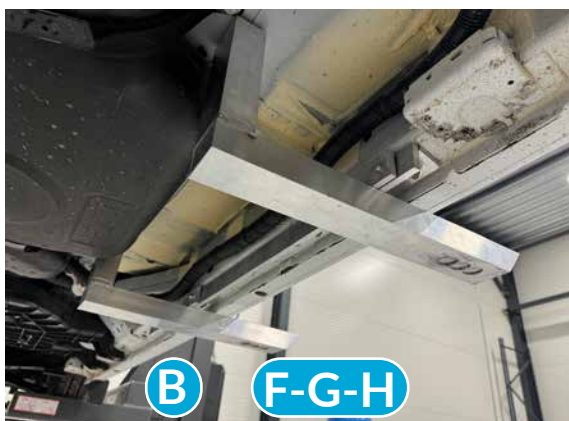


3

Side step - Right / Ford Transit Custom 24-

Item no: AT348XXH-S



4

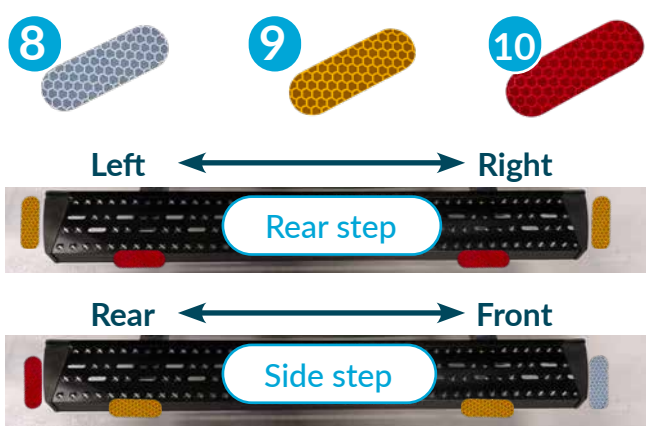

5