

Side step - Left / Ford E-Transit 22-

Item no: AT311XXV-E-S

Contents - QMK0003

#	No	Item no	Description
A	1x	23032012	Mounting bracket left
B	2x	23032016	Mounting bracket Sliding Door E-Transit
C	6x	7985T0600304	Bolt Torx A2 M6x30
D	6x	7570600000	Nut M6x18,5
E	6x	125A064	Washer M6
F	2x	985V104	Nut M10
G	2x	933100304	Bolt M10x30
H	4x	125A104	Washer M10



Contents - QAT1200

#	No	Item no	Description
1	1x	SMV3109	Step
2	1x	23012001	Plastic cap right side
3	1x	23012002	Plastic cap left side
4	4x	933080204	Bolt M8x20
5	4x	985V084	Nut M8
6	4x	125A084	Washer M8
7	2x	7504NT0350092	Self-tapping screw
8	1x	ULS812	Reflex, white (forward pointing)
9	2x	ULS804	Reflex, yellow (sideways pointing)
10	2x	ULS805	Reflex, red (rear pointing)




Side step - Left / Ford E-Transit 22-

Item no: AT311XXV-E-S


Front ← → Rear



1

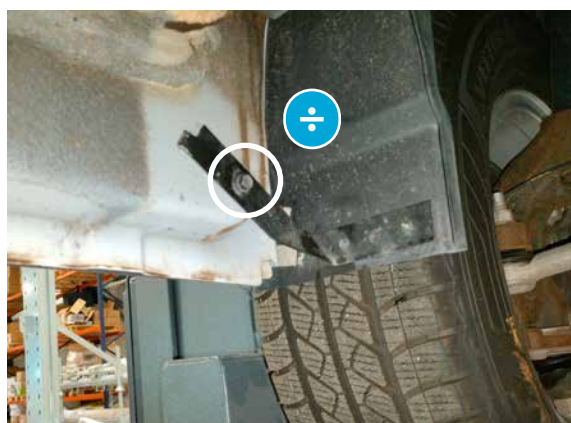

2

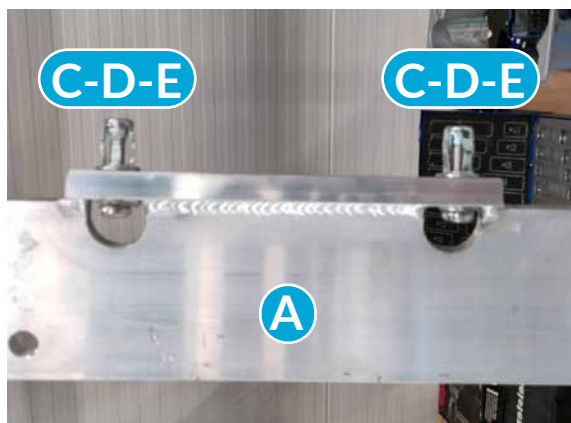

3




4

Side step - Left / Ford E-Transit 22-

Item no: AT311XXV-E-S



5


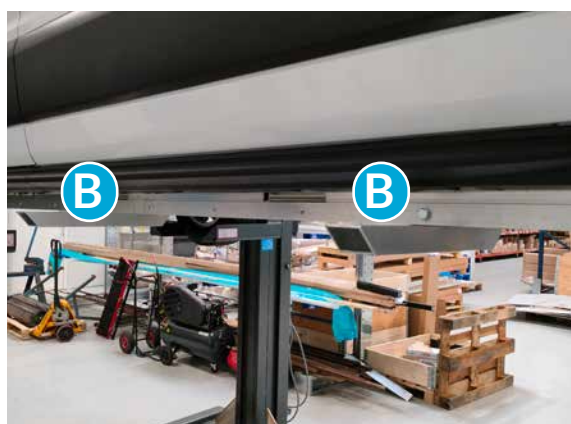


Place brackets B at position 4 and 7 seen from front

6



7

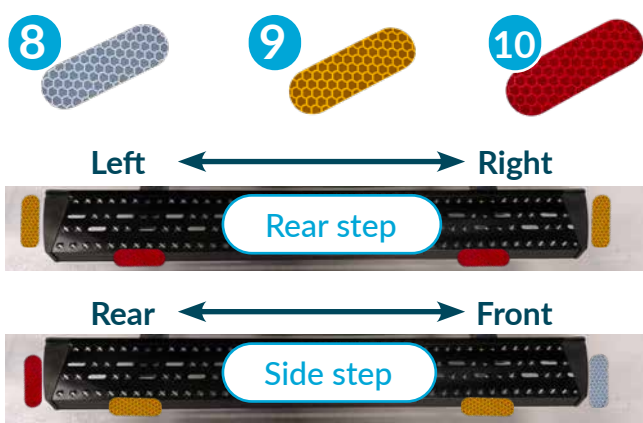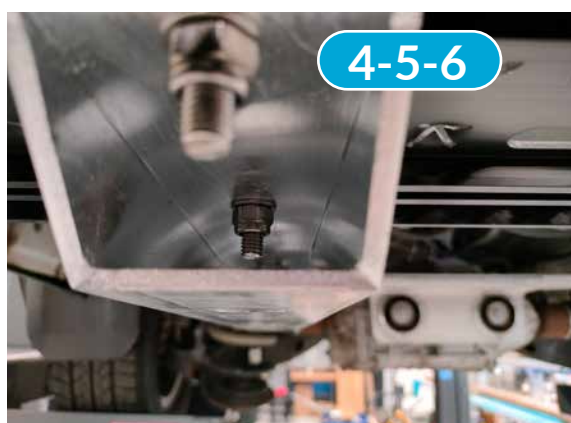

8