


Rear step / Mercedes Sprinter 18-

Item no: AT237XXX-B

Contents - QMK0019

#	No	Item no	Description
A	1x	23032001	Mounting bracket Right
B	1x	23032002	Mounting bracket Left
C	8x	931121204	Bolt M12x120
D	8x	985V124	Nut M12
E	16x	7089124	Washer M12

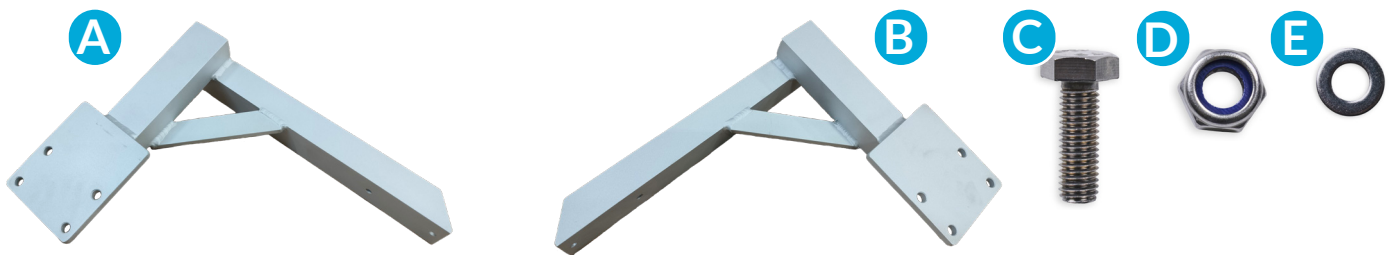






Contents - QAT1200

#	No	Item no	Description
1	1x	SMV3109	Step
2	1x	23012001	Plastic cap right side
3	1x	23012002	Plastic cap left side
4	4x	933080204	Bolt M8x20
5	4x	985V084	Nut M8
6	4x	125A084	Washer M8
7	2x	7504NT0350092	Self-tapping screw
8	1x	ULS812	Reflex, white (forward pointing)
9	2x	ULS804	Reflex, yellow (sideways pointing)
10	2x	ULS805	Reflex, red (rear pointing)



Rear step / Mercedes Sprinter 18-

Item no: AT237XXX-B

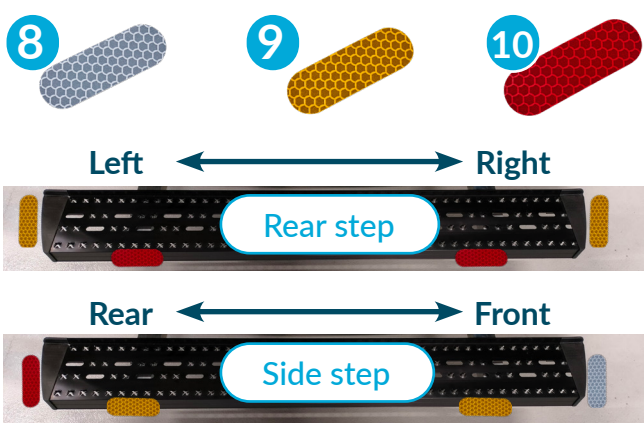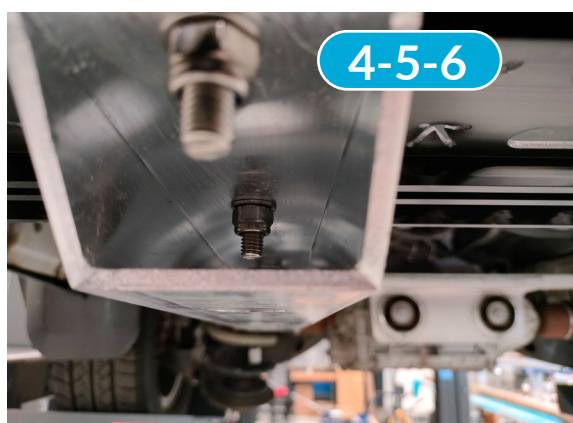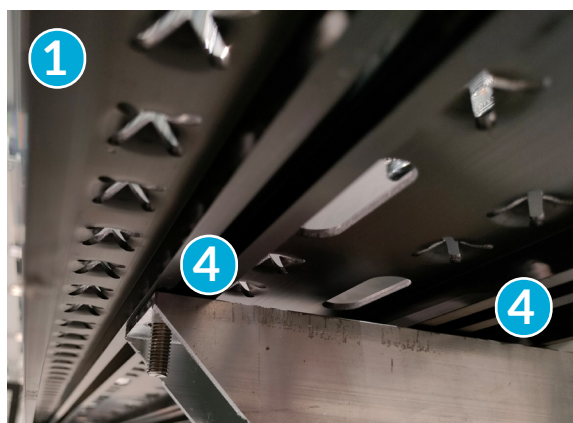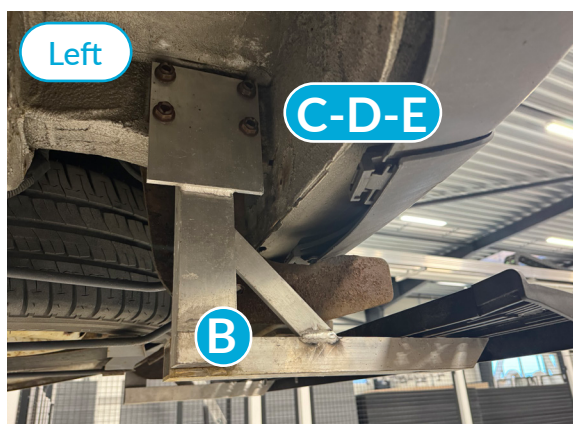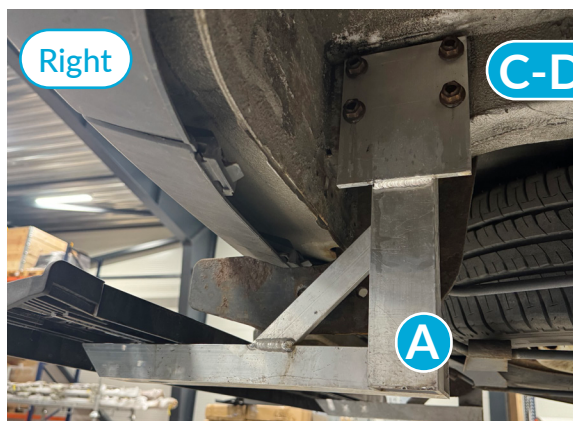

1

2

3

4