




FITTING INSTRUCTIONS

Alu Rear Step / Universal detachable tow bar

AT000XX1-B 83cc & 90cc flange ball (2/4 fix points)


A 1x

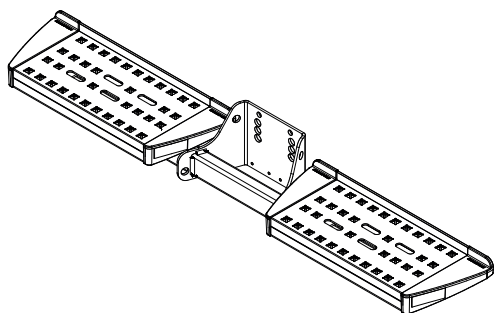

B 1x



C 1x

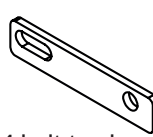


Use if 4 bolt towbar


D 2x M6x16
2x M6




NB: Replacement of tow bar bolts is recommended - per recommendation from tow bar producer

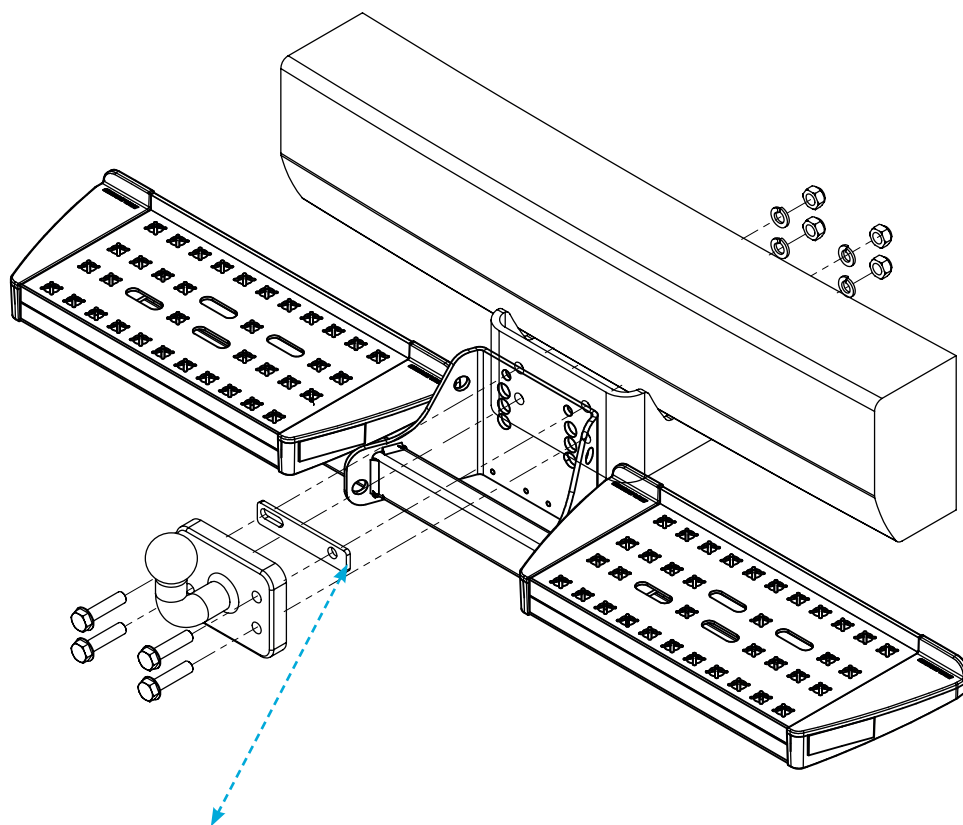

For low placement of step
Use plate C

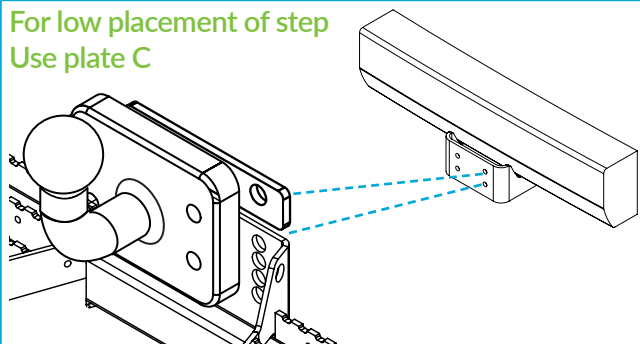

A, B & D

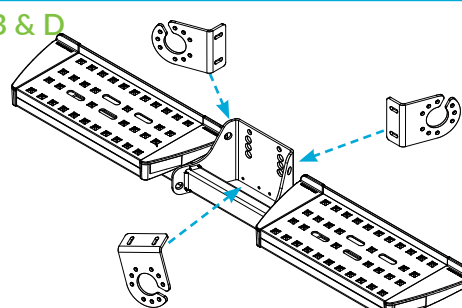

Placement options

SMARTVAN